


## How to Adjusting the Mixture Screw




1.

This silver cap will need to be removed to expose the mixture adjustment. Drill a small hole into the mixture adjustment cap using a power drill, and begin to screw in a small screw to catch and remove the cap. Do not screw in too deep.

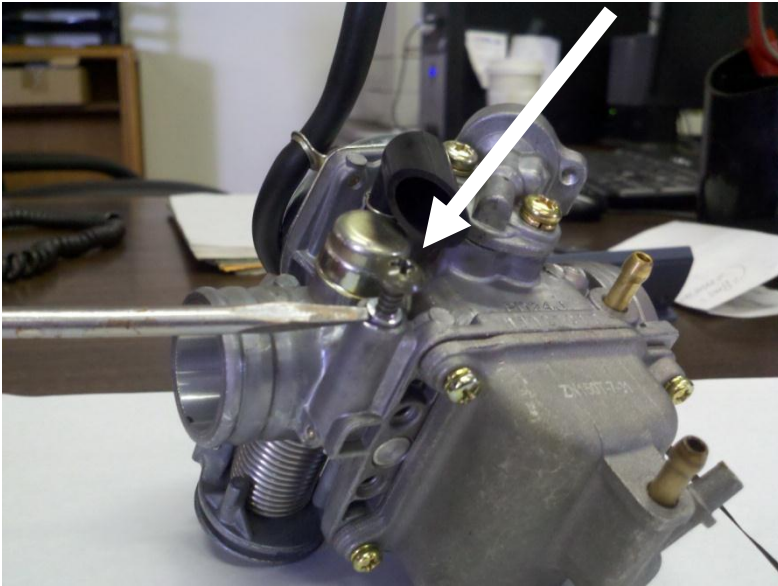

2.

With pliers, grab the top portion of the screw and pull out the screw with the silver cap.

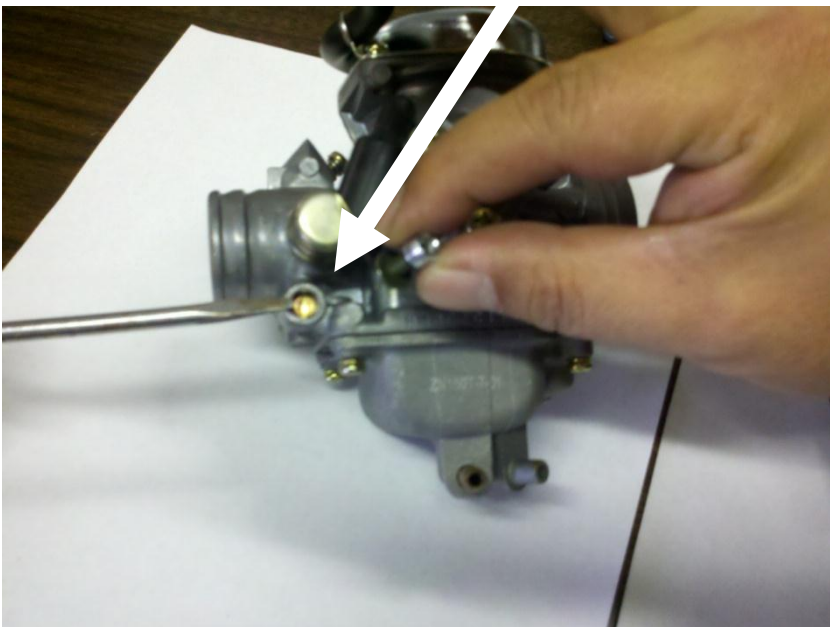

3.

This will expose the mixture adjustment screw. To properly adjust this, tighten this screw completely, and then loosen 2 and ½ turns.



***BMS 150cc/50cc Scooter  
Carburetor Maintenance  
Tips***



**If you are experiencing difficulty starting your scooter after it has been sitting for a while, or if your scooter does not idle correctly, the following adjustments may be required:**

For any questions Please Contact: [service@bmsmotor.com](mailto:service@bmsmotor.com)